




## 58-67 Beetle USB charger install.

- 1 Remove ashtray from vehicle.
- 2 Drill a 1/4" hole for the wire grommet in the ashtray housing from the luggage compartment side. Location isn't critical, but make sure it isn't too close to the edge. The circle in the following image is a suitable spot.



- 3 Re insert ashtray and drill a ¼" (6mm) hole in the rear of it using the hole in the surround as your guide. It's important that the two holes are aligned so the wire slides through smoothly then opening and closing the ashtray. Remove sharp edges from both holes and insert supplied grommets. (Softening them in hot water will make it easier.)**
  
- 4 Remove the socket hex screw from the charger. Poke the wire through the grommet and position the charger as shown below. Secure with the screw just tight enough to stop it moving, but not too tight. Then thread the wire through the other grommet and insert the ashtray into the dash.**

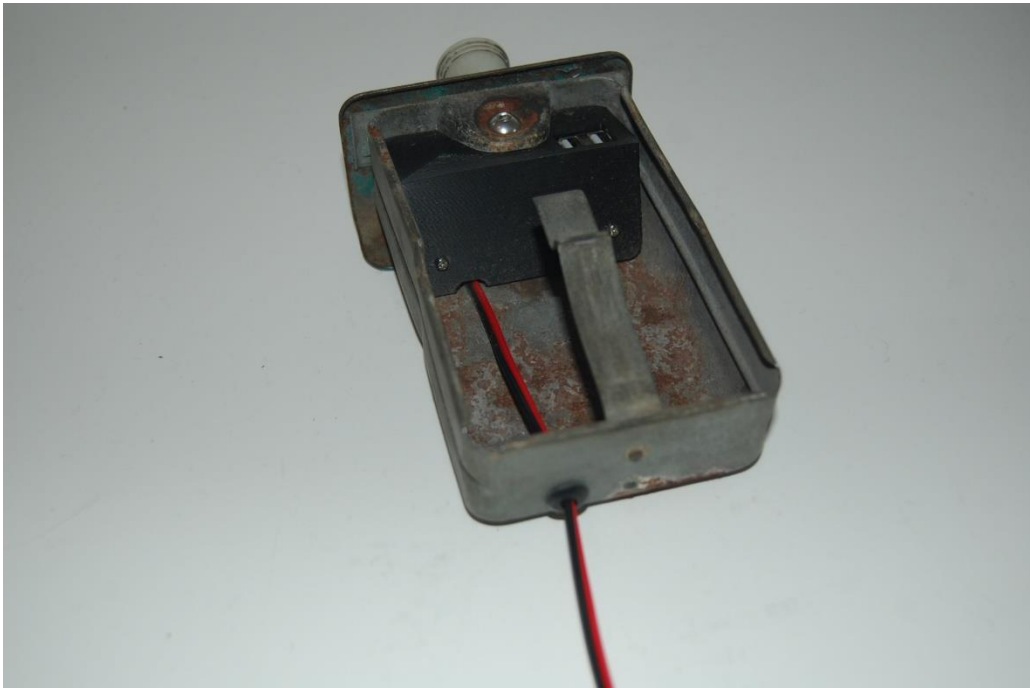

- 5 Connect your wires with your preferred method (a soldered joint is best). This unit works with both 6V and 12V systems.**



- 6 Go for a drive.**