




Installation guide for VW Rabbit/Golf Mk 1

- 1 Remove the ash tray from the dash.
The charger will locate snugly between the ribbed areas and the front of the ashtray.



2 On the sides of the tray lay out the hole positions as shown. Vertically on the centerline of the charger face and $\frac{1}{4}$ " (6mm) from each end.

Then drill approximately $\frac{3}{32}$ " or 2.5mm clearance holes and countersink for the two 2mm screws. Repeat for the other side.

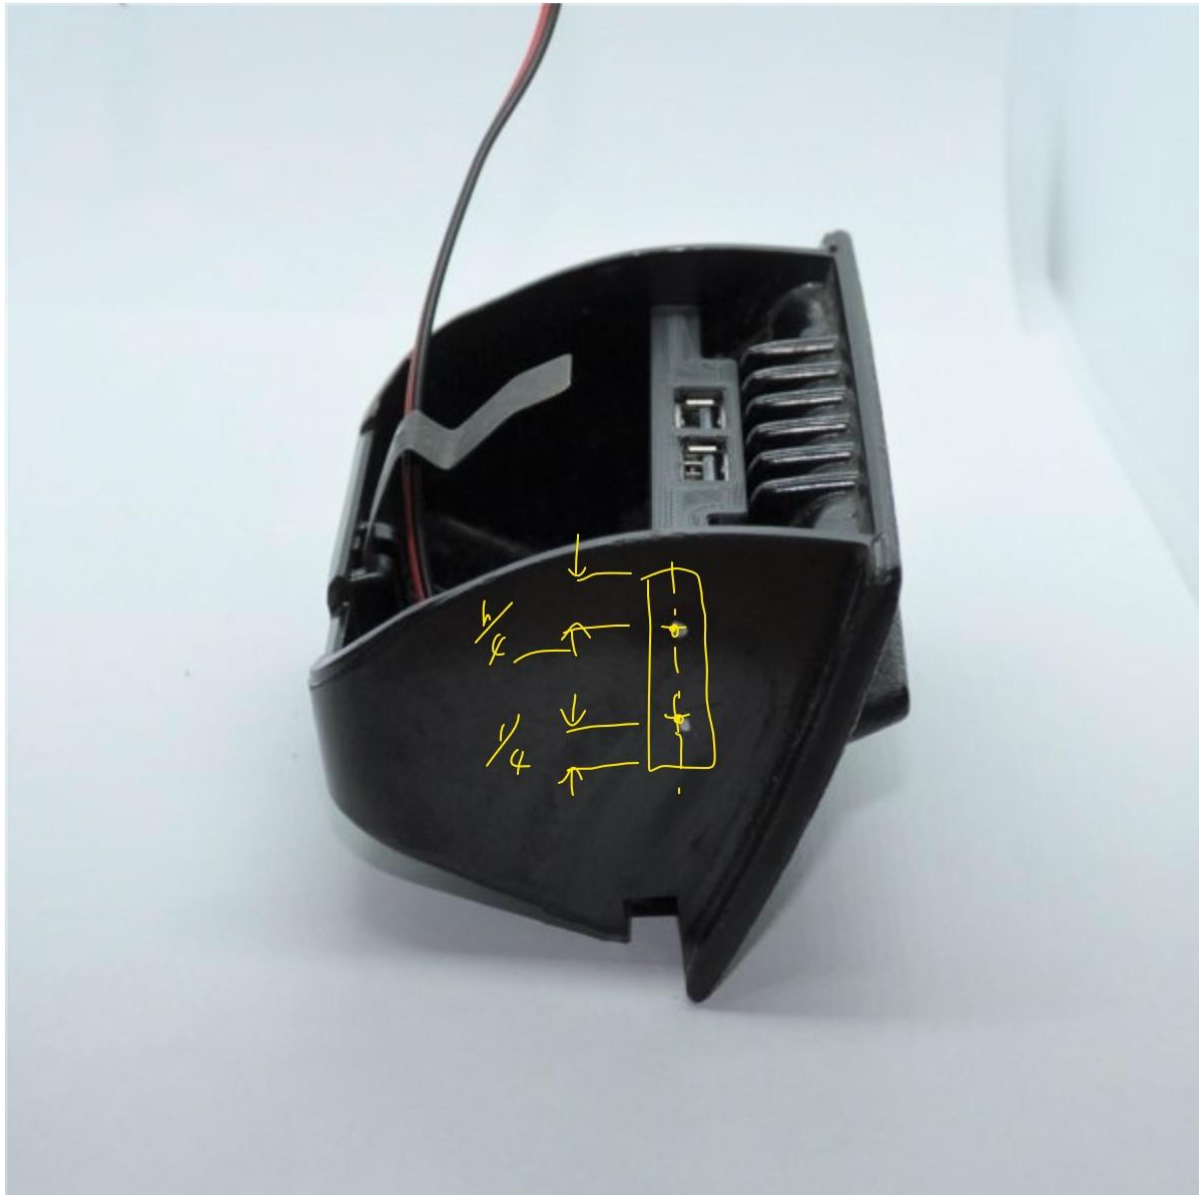

- 3 Drill a ¼" (6mm) hole for the wire exit hole at the back of the tray. Location isn't critical but the layout below works well. Drill carefully as this material is quite brittle.



- 4 Install the grommet. Hot water will help to soften it if needed. Slide the wire through the grommet and locate the charger in it's final location.
- 5 Hold the charger firmly in position and screw in the four self tapping screws into the charger. No drilling of the charger is necessary. A manual screwdriver is best with some pressure applied.



- 6 Prepare your power and ground wires behind the dash. Check for smooth operation of the ashtray and then connect the wires. Leave a few inches of excess length to allow for the movement of the tray when opening.

- 7 Plug in your phone and go for a cruise!

