



## **61 Pontiac USB charger install.**


- 1 Remove the ashtray from the vehicle and clean out all the ash. The fascia can be removed if desired (as shown) but it isn't necessary for the installation.**
- 2 Drill a 1/4" hole for the wire grommet in the ashtray base. Location isn't critical, but in the centre works. The image below shows a suitable spot.**




- 3 Remove any sharp edges on the hole with a deburring tool or larger drill bit. Insert the supplied grommet. (Softening it in hot water will make it easier.)**



- 4 Remove the socket hex screw from the charger. Poke the wire through the grommet and position the charger as shown below. It takes a bit of maneuvering as this is a small ashtray, but it will fit. Once you have it past the stubber, plug in a USB cable to pull the charger back up as its too tight to get a finger in there. Align the screw hole with the stubber and insert the supplied socket head screw just tight enough to stop it moving, but not too tight.**

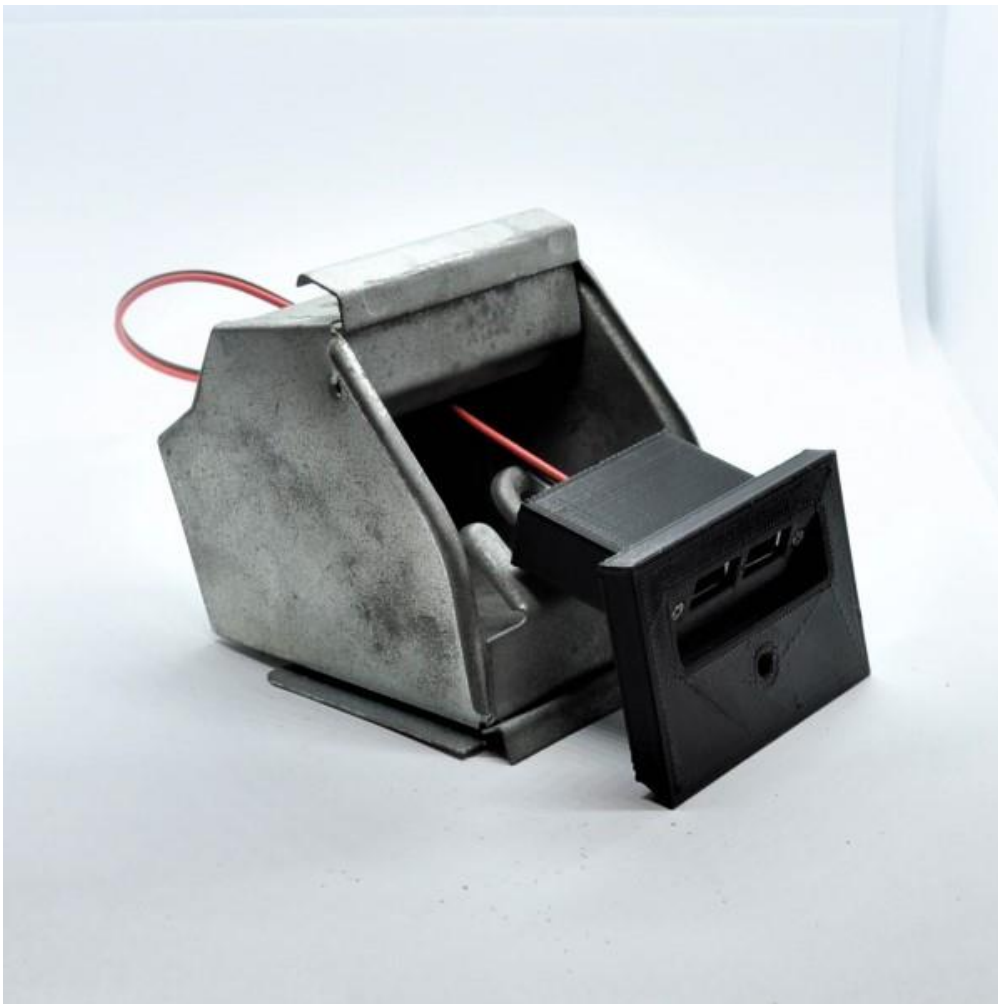

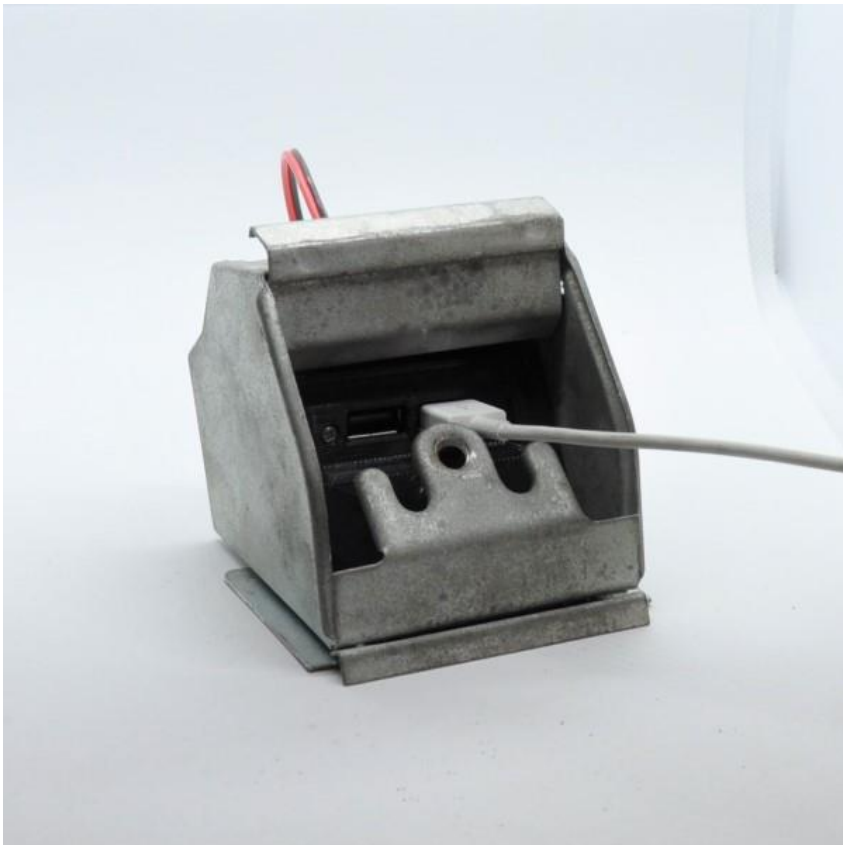



- 5 Connect your wires with your preferred method (a soldered joint is best, but crimp terminals will work.) Leave some slack to allow for the opening and closing of the ashtray.**



- 6 Go for a cruise.**