




Installation guide for 64 Pontiac

- 1 Remove the ash tray from the dash.
- 2 The charger will be positioned against left side of the ashtray under the lip and pushed towards the painted fascia panel



- 3 On the side of the ashtray lay out the two hole positions as shown. They don't need to be exact as you will be screwing into solid plastic, but ensure that they are $\frac{1}{4}$ " (6mm) in from the edge of the charger (sketched in yellow). Drill $\frac{3}{32}$ " (2.5mm) in those two spots and countersink to match the supplied screws.

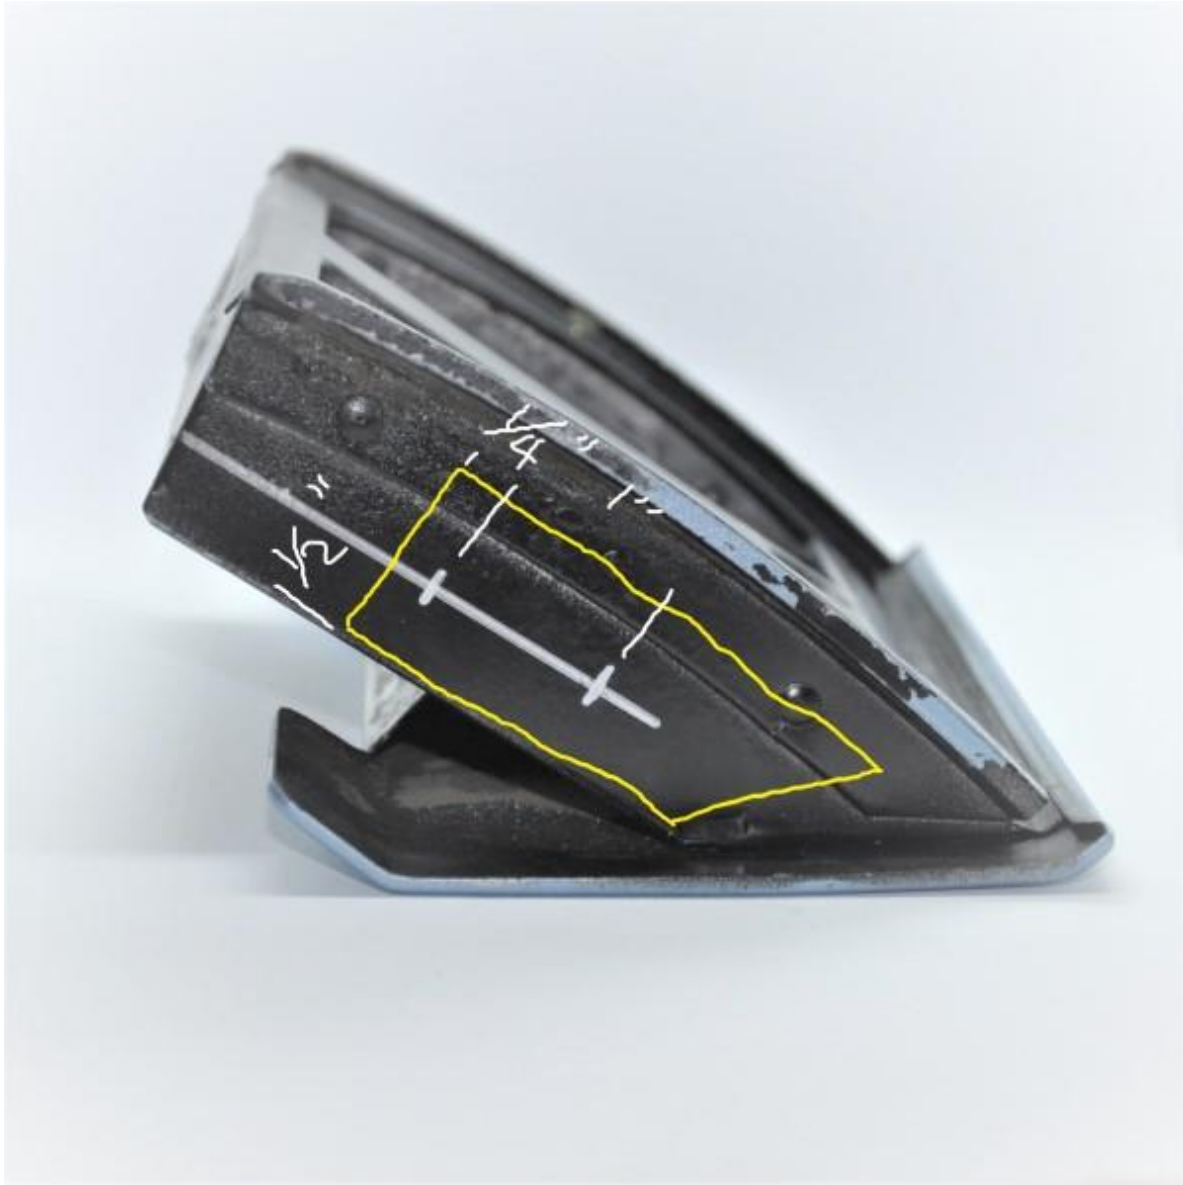

- 4 Drill a $\frac{1}{4}$ " (6mm) hole for the wire exit hole at the bottom of the back of the tray. In the region of the yellow mark. Check for obstructions under the dash where the wire will exit prior to drilling.



- 5 Remove any sharp edges with a larger drill, countersink or file.

- 6 Install the grommet. Softening it hot water will make it much easier.
Thread the wire through the ashtray hole as in image below.



- 7 Hold the charger firmly in the final position to the tray and screw in the self tapping screws. We do not recommend drilling pilot holes in the charger as it's easy to go too deep and into the circuitry causing damage. A regular screwdriver with some pressure works best. You can use a battery screwdriver but go slowly.



- 8 Prepare your power and ground wires behind the dash. Reinsert the ashtray. Check for smooth operation and then connect the wires. Leave a couple of inches of excess length to allow for the movement of the tray when opening.

- 9 Plug in your phone and go for a cruise!



