


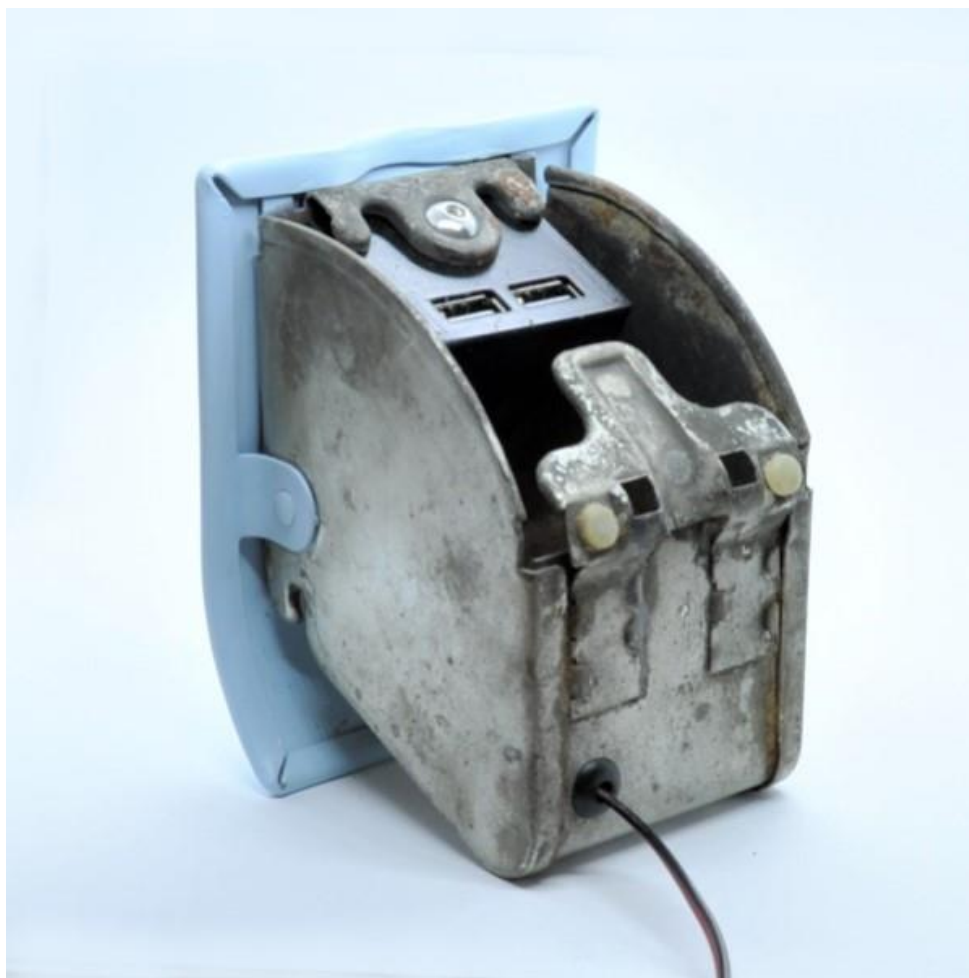

61-66 Ford Truck USB charger install.

- 1 Remove ashtray from vehicle.**
- 2 Drill a 1/4" hole for the wire grommet in the back of the ashtray. Location isn't critical, but make sure it isn't too close to the edge and in a place where there is room for the wire to exit under the dash. The location in the following image is a suitable spot.**



- 3 Remove the socket hex screw from the charger. Poke the wire through the hole, slide the grommet over the wire and insert the grommet in the hole. Warming the grommet in hot water will soften it for an easier install. Position the charger as shown below and secure with the USB ports towards the back of the ashtray and screw just tight enough to stop it moving, but not too tight.**



- 5 Connect your wires with your preferred method (a soldered joint is best) but a crimped connection will be adequate.**



- 6 Go for a cruise.**