



Triumph Herald USB charger install.


- 1 Remove ashtray from vehicle.



- 2 Drill a 1/4" hole for the wire grommet in the back of the ashtray. Location isn't critical, but make sure it isn't too close to the edge and in a place where there is room for the wire to exit under the dash. The location in the following image is the ideal spot as it provides a straight path for the wire. Insert the grommet. Softening in hot water will make this easier to do.**



- 3 Pass the wire through the grommet and position the charger against the front and side of the tray. Hold or tape it in place and invert to lay out the screw holes as shown below. Measurements are not critical but keep at least 5mm in from the edges of the charger.

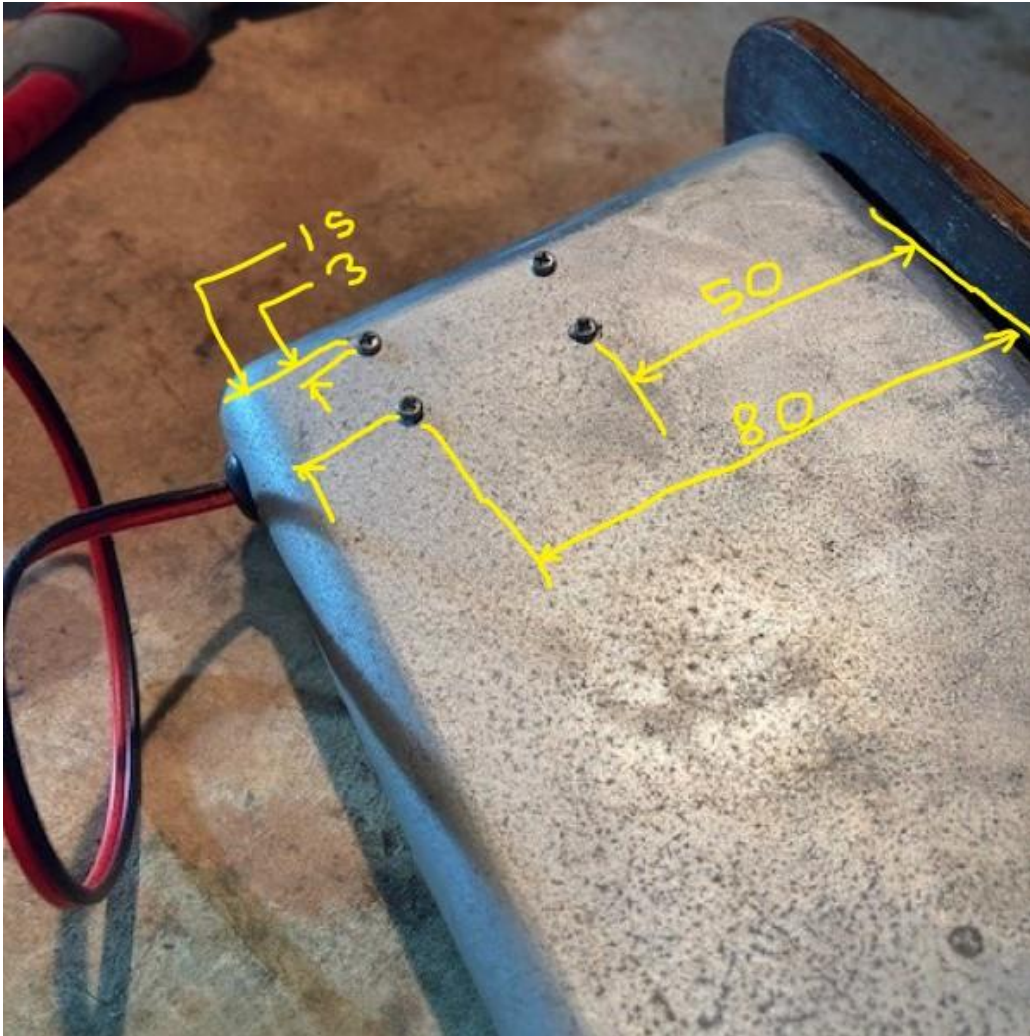

- 4 Remove the charger and drill holes for 2mm screws in the tray.

DO NOT drill into the charger itself as it is easy to go too deep and damage the circuitry. The screws are self tapping.

Remove any sharp edges with a larger drill bit.

Position the charger back in place with the wire through the grommet, hold firmly and screw in the screws,



5 Prepare your wires under the dash. Red to positive, black to ground.

Leave some slack to allow the ashtray to open and close easily.

Common practice is to use an unswitched circuit so you can charge your device while parked.

Connect the wires with your preferred method.

6 Go for a drive.