




Installation guide for 67 Chevy and GMC trucks

- 1 Remove the ash tray from the dash.
Mark a position to drill the wire exit hole at the back of the tray.
Position isn't critical but somewhere close to the image below is ideal.



- 2 On the underside of the tray lay out the hole positions as shown. Then drill approximately $3/32''$ or 2.5mm clearance holes and countersink for the four 2mm screws.

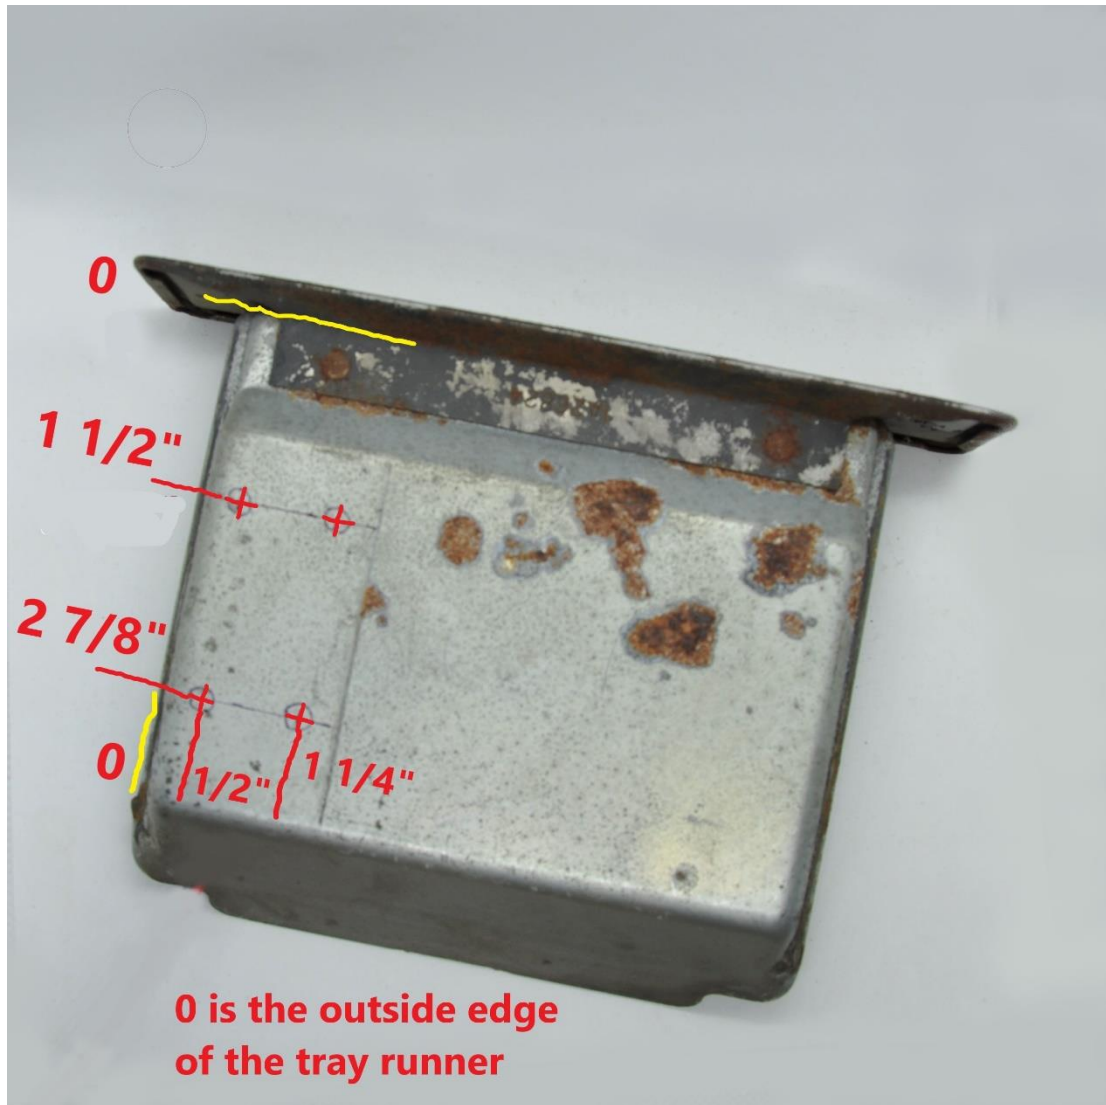

- 3 Drill a ¼" (6mm) hole for the wire exit hole on the underside of the tray. Remove sharp edges A larger drill bit works well for this.
- 4 Install the grommet. Hot water will help to soften it if needed. Slide the wire through the grommet and position the charger snug to the side and front of the tray.



- 4 Hold the charger firmly in this position and screw in the four self tapping screws into the charger. Usually, no drilling of the charger is necessary. A manual screwdriver is best with firm pressure applied. If you do choose to use a drill or power driver, be very careful not to drill/screw too deep as the circuit board can be damaged.



- 6 Prepare your power and ground wires behind the dash. It can be useful to make the tails long enough to poke up through the ashtray opening so you can make the connections to the charger above dash instead of working underneath. Reinsert the tray into the dash.

- 7 Plug in your phone and go for a cruise!