



## Installation guide for 60-63 CHEVROLET TRUCK

- 1 Remove the ash tray from the dash.
- 2 Unscrew the fascia and handle from the ashtray.




- 3 Drill a  $\frac{1}{4}$ " (6.5mm) hole for the wire exit hole at the bottom of the back of the tray. Check for obstructions where the wire will exit prior to drilling. The position indicated by the circle below works well.



- 4 Remove any sharp edges with a larger drill, countersink or file. Install the grommet. Hot water will help to soften it if needed.



- 5 Thread the wire through the ashtray hole as in image below and then reattach the fascia etc. On the ashtray used in the photos, the original screws were just long enough to reuse. If yours aren't, replace with 1/8" longer ones.

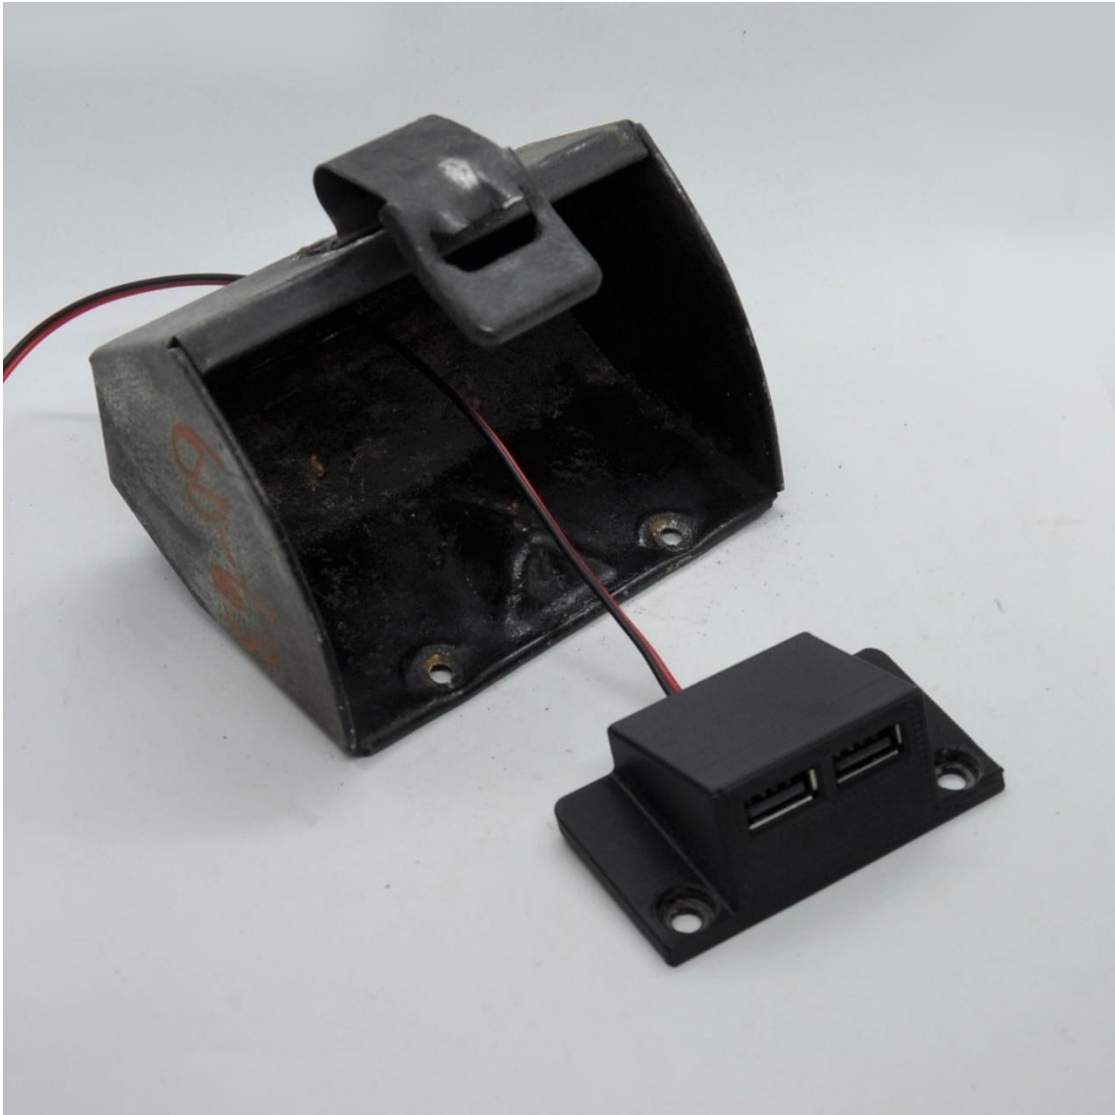



- 6 Prepare your power and ground wires behind the dash. Reinsert the ash tray back in the dash. Check for smooth operation and then connect the wires. Leave a couple of inches of excess length to allow for the movement of the tray when opening.
  
- 7 Plug in your phone and go for a cruise!