



Installation guide for 64-66 CHEVY G10 Van

- 1 Remove the ash tray from the dash.
- 2 Unscrew the fascia and handle from the ashtray.




- 3 Drill a ¼" (6.5mm) hole for the wire exit hole in the corner of the back of the tray. Check for obstructions and a clear path where the wire will exit prior to drilling. The left hand corner (from the drivers seat) as shown below should work well but double check if that location works for your vehicle before drilling.



- 4 Remove any sharp edges with a larger drill, counter sink or file. Install the grommet. Hot water will help to soften it if needed.



- 5 Thread the wire through the ashtray hole as in image below and then reattach the fascia etc. On the ashtray used in the photos, the original screws were just long enough to reuse. If yours aren't, replace with 1/8" longer ones.

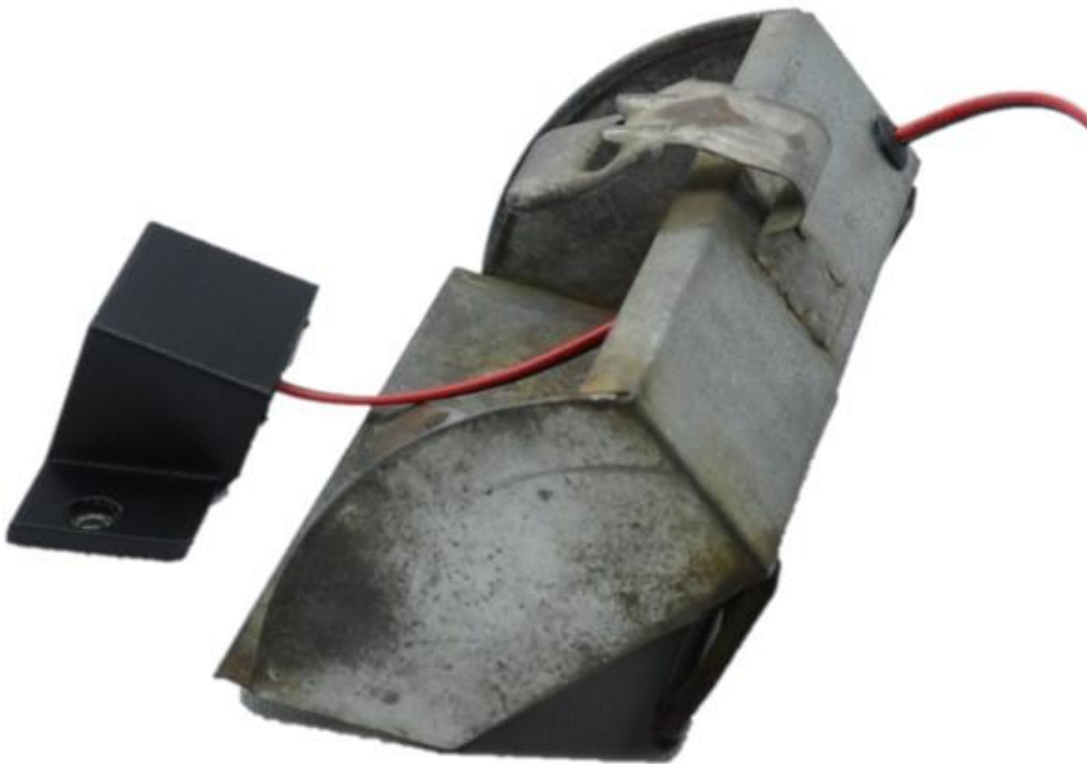



- 6 Prepare your power and ground wires behind the dash. Reinsert the ash tray back in the dash. Check for smooth operation and then connect the wires. Leave a couple of inches of excess length to allow for the movement of the tray when opening.

- 7 Plug in your phone and go for a cruise!